VIORE™ TECHNOLOGY & INNOVATION

OPERATING INSTRUCTIONS

26" HD LCD Television with Built-in DVD Player

LCD26VH56M

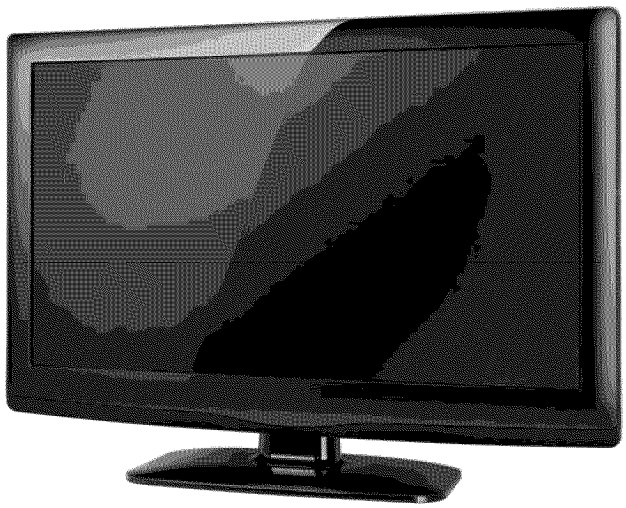

AIR (TV)/CABLE MODE SELECTION

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to "6. Channel MENU" in page 14 of this manual for the details.

Contents

Safety and warnings.....2-4

Introduction.....5

Installation.....6-9

Remote Control.....10

Operation.....11-14

DVD operation.....15-18

DVD Trouble shooting.....19

Trouble Shooting.....20

Instruction For Wall Mount.....21

IMPORTANT SAFETY INSTRUCTION

1.Read these safety instructions.
2.Keep these safety instructions.
3.Heed all warnings.
4.Follow all safety instructions.
5.Do not use this apparatus near water.
6.Clean only with dry cloth.
7.Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
8.Do not install near any heat sources such as radiators , stoves, or other apparatus (including amplifiers)that produce heat.
9.Protect the power cord from being walked on or pinched particularly at power outlets, and the point where they exit from the apparatus.
10.Only use attachments/accessories specified by the manufacturer.
11.Unplug this apparatus during lightning storms or when unused for long periods of time.
12.Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture , does not operate normally, or has been dropped.
13.Apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

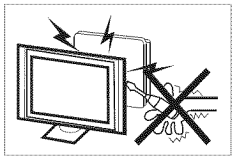

High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

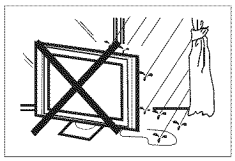

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

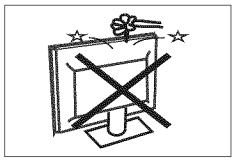

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

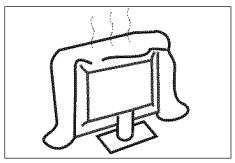

Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

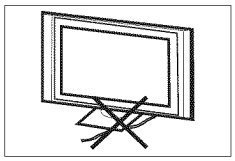

Do not trap the power supply cord under the television receiver.

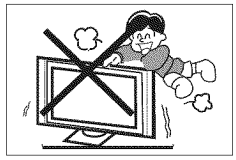

Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

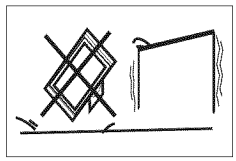

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual , and damage to the television, may result if it falls.

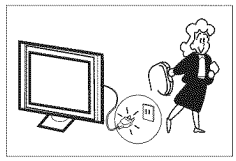

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

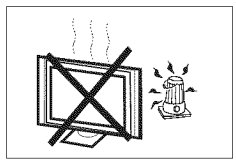

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

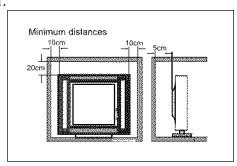

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Thank you very much for purchasing this TV. To enjoy your product from the very beginning, read this manual carefully and keep it handy for easy reference.

INSTALLATION

- Locate the TV in the room where light does not strike the screen directly.
- Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- Allow enough space between the TV and the wall to permit ventilation.
- Avoid extremely warm locations to prevent possible damage to the cabinet or premature component failure.
- This TV can be connected to AC 100-240 Volts. 50/60 Hz. Never connect to a DC supply or any other power supply.
- Do not cover the ventilation openings when using the TV.

CAUTION

Never tamper with any components inside the TV, or any other adjustment controls not mentioned in this manual. All LCD-TVs are high voltage instruments. When you clean up dust or water drops on the LCD PANEL or CABINET, the power cord should be pulled out from the receptacle, then wipe the TV with a dry soft cloth. During thunder and lighting, unplug the power cord and antenna cord to prevent damage to your TV. All repairs to this TV should only be performed by qualified TV service personnel.

Earthing connection--- The apparatus shall be connected to MAINS socket outlet with a protective earthing connection。 MAINS plug or appliance coupler of the apparatus is used as disconnect device, it should remains readily operable。

Warning: Change or modifications to this unit not expressly by the part responsible for compliance could void the user's authority to operate the Equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
-Consult the dealer or an experienced radio TV technician for help.

Shield cables must be used with this unit to ensure compliance with the Class B FCC limits.

This symbol indicates that this productincorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.
WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

Main features

- 1366 x 768 native resolution for HD performance
- Integrated ATSC TV tuner for HDTV broadcast reception
- Built-in progressive scan DVD player
- Built-in 3-in-1 card reader (SD, MMC, MS) and USB port for playing digital media files
- High brightness provides a vivid and brilliant picture
- Deeper blacks and brighter whites with high contrast
- Wide Screen aspect ratio (16:9) for a complete home theater experience
- HDMI input for true digital connection
- VGA port for connection to PC
- Built-in stereo speaker system
- Full-function Remote Control

Accessories

AC Power Cord.....	1
Infrared Remote Control.....	1
User's Manual	1
Battery(AAA).....	2

Main parameter

Viewing Picture Size(diagonal)	26 inch
Resolution:	1366x768
Aspect Ratio:	16:9
TV System:	ATSC Digital system and NTSC Analog system
Video Signal System:	NTSC/PAL/SECAM
Receiving Channel:	Cable :1-135/ Air: 2-69(ATV&DTV)
Power consumption:	130W
Input Power Voltage:	AC 100V-240V 50/60Hz
Audio Output Power(THD ≤ 7%):	2x3W
Rear High-Definition Multimedia Interface(HDMI) Input	x 2
YCb(Pb)Cr(Pr) Input	x 1
Rear Composte Video Input	x 1
Analog RGB(VGA) Input	x 1
Rear Audio Input	x 2
Horizontal definition(TV line)	Composite Video Input >=350 Video Input >=400 YCb(Pb)Cr(Pr) >=400

Front panel

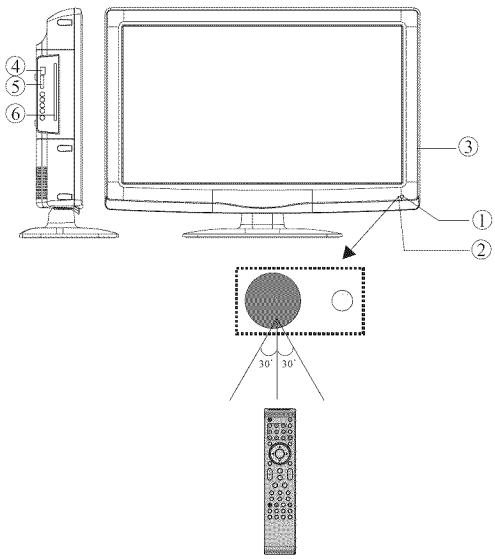

1: Remote control sensor.
2: Indicator LED: GREEN POWER ON.
RED STANDBY.
3: Key board
4: USB Port
5: 3-in-1 Card Slot (SD, MS, MMC)
6: DVD Disc loading Slot

Side panel

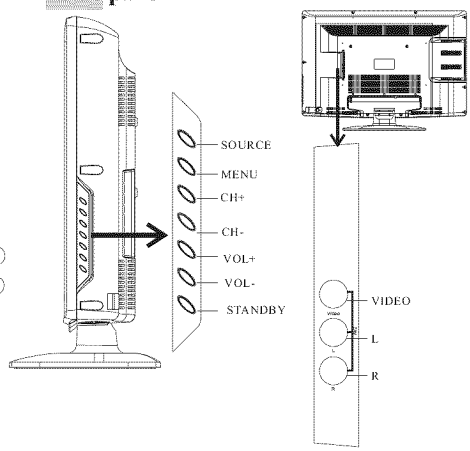

1. SOURCE: Display the input source menu.
2. MENU: Display main MENU.
3. CH+/CH-: In TV mode, press "CH+" or "CH-" to change the channel up and down.In MENU mode, press "CH+" or "CH-" to select items .In standby mode, press "CH+" or "CH-" to turn on the TV.
4. VOL+/VOL-: Adjust sound level.In MENU mode, press "VOL+" or "VOL-" to adjust the item that you selected.
5. STANDBY : Press this button to turn the unit ON from STANDBY mode. Press it again to turn the set back to STANDBY.
6.VIDEO INPUT
7.AUDIO INPUT-L
8.AUDIO INPUT-R

REAR AV PASTER

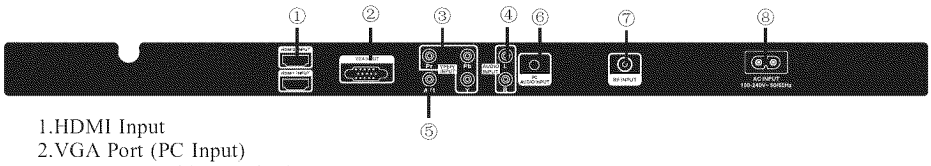

1.HDMI Input
2.VGA Port (PC Input)
3.Component Video (YPbPr) Input
4.Audio Input
5.Composite Video Input
6.PC Audio Input
7.Antenna Socket
8.AC Power Socket

Note: 1.Composite video input and component video input share the audio input.
2.When "DVI to HDMI cable" is used, the audio output for DVI needs to be connected to the PC Audio Input (above 7).

PC

STEPS:

Be sure both the TV and computer are set to Power off.

1.Connect VGA and audio cable.
2.Connect the power cord.
3.Power on the TV, switch to VGA mode.
4.Power on the VGA.
This sequence is very important.

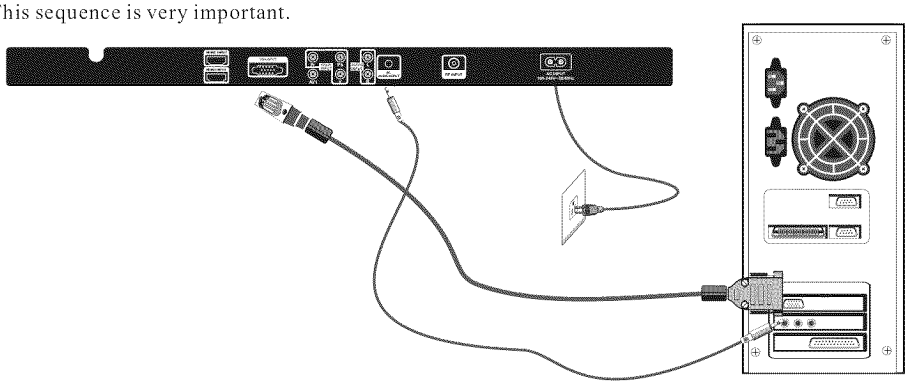

PRESET MODE

	RESOLUTION	V.Freq.(Hz)	H.Freq.(KHz)
1	720*400	70	31.47
2	640*480	60	31.47
3	640*480	75	37.50
4	800*600	60	37.88
5	800*600	75	46.88
6	1024*768	60	48.36
7	1024*768	70	56.48
8	1024*768	75	60.02
9	1280*1024	60	63.98
10	1280*1024	75	80.00

ANTENNA

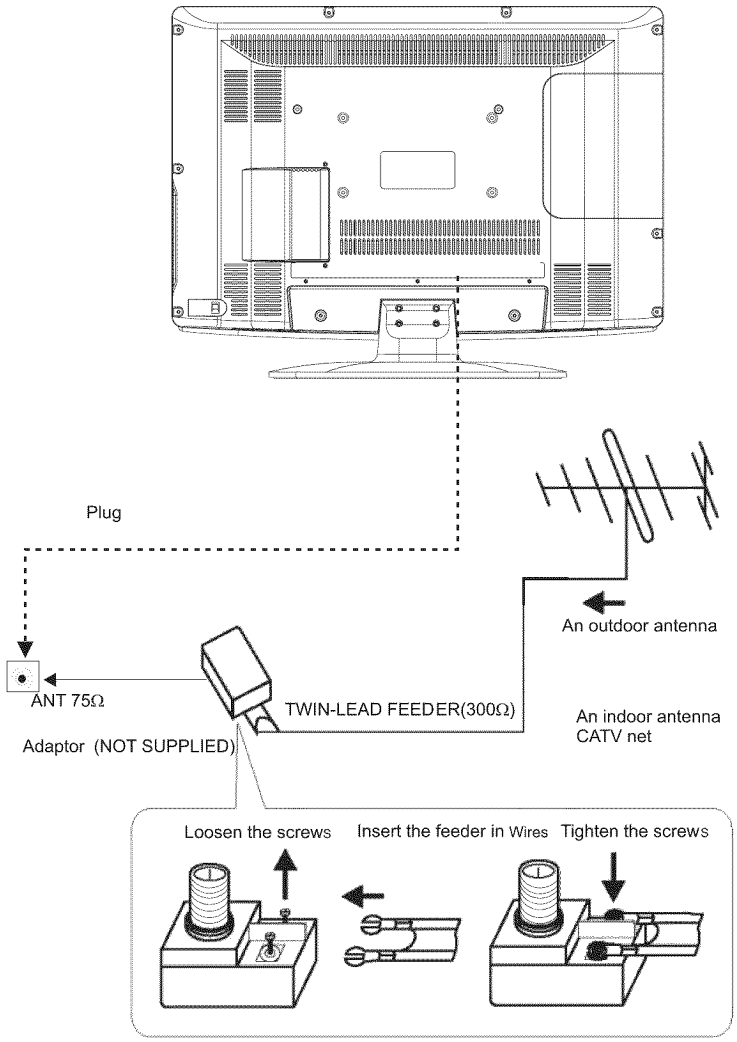

Note:
Aerial connections:IEC(female).
Input impendance:75Ωunbalanced.

AV EQUIPMENT

This TV provides one group of AV ,one group of YPbPr for convenient connectionto VCR,DVD or other video equipment. Please refer to the owner's manual of the equipment to be connected as well.

You can use the input terminals on TV set rear as follows.

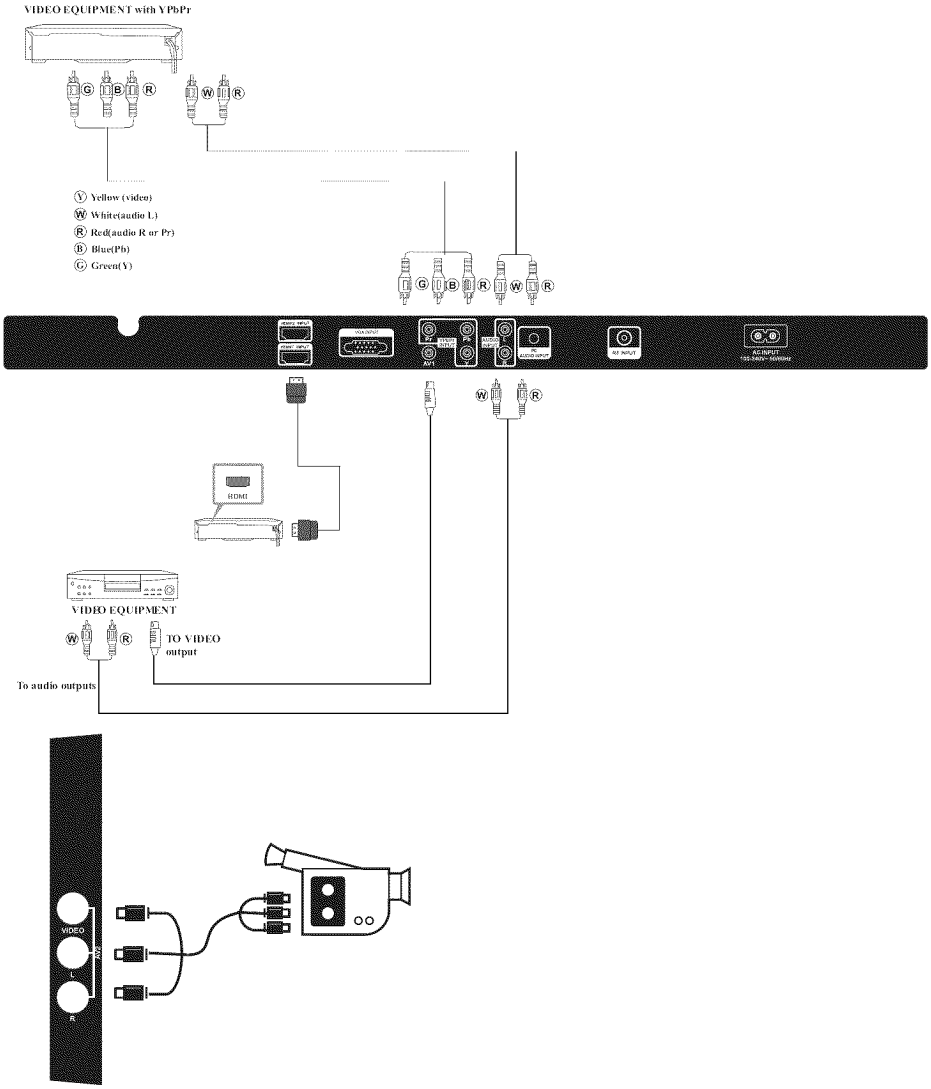

It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc.....
YPbPr can support these video formats:480i,576i,480p,576p,720p,1080i.

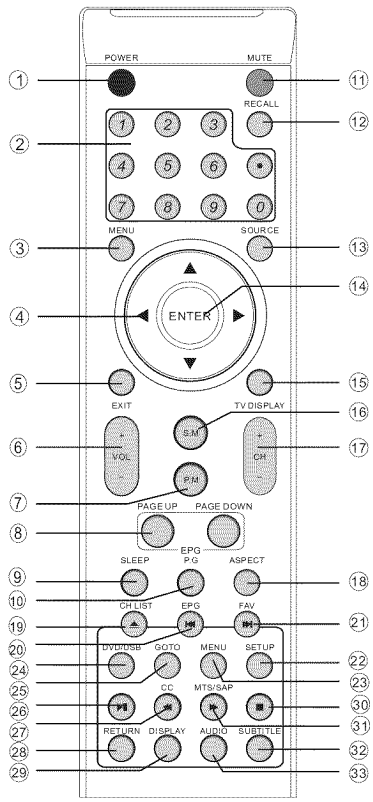

Insert Batteries Into the Remote Control

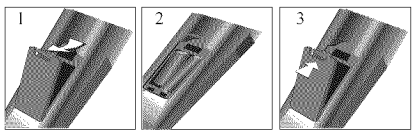

1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover.
   Replace with new batteries when the TV set begins to show the following symptoms:
   Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

Remark:

1) Alkaline Battery Recommended.
2) Remove batteries when they are exhausted or if the remote control is not to be used for long time.

1:**POWER**
To set the TV standby or on.
2:**NUMBER KEY**:
For direct access to program.
3:**MENU**
To display TV menu or to return to the previous menu.
4:**CURSOR**
To move within the menu.
5:**EXIT**
Used to exit menu.
6:**VOL+/-**
To adjust sound level.
7:**P.M**
To switch picture mode.
8:**PAGE DOWN/PAGE UP**
In EPG mode, use this key to page up/down the EPG information.
9:**SLEEP**
Set time to turn off the TV.
10:**P.G**
Setting the Parental Control level control.
11:**MUTE**
To disable or enable the sound.
12:**RECALL**
To access the previously viewed program.
13:**SOURCE**
To display or exit TV input source menu.
14:**ENTER**
Confirms selection.
15:**TV DISPLAY**
Displays/removes the program Information
16:**S.M**
To switch sound mode.
17:**CH+/CH-**
To access the next or previous Program.
18:**ASPECT**
To change picture aspect .
19:**CH LIST:**
Used to display the channel list.
20:**EPG**:
Display all the information of DTV programs.
21:**FAV**:
Used to access your favourite channels in digital TV mode.
27:**CC**
Enable or disable the CC function (only used for TV and AV source).
31:**MTS/SAP**
Switch the sound stereo, SAP and mono.

NOTE:
For the function of DVD button,please refer to the DVD part at the back of this instruction book.

1. PICTURE MENU

The first item of the MENU is PICTURE MENU.
You can adjust picture effect here, such as contrast, brightness, etc.
Press ▼▲ to select, press ◀ ▶ to adjust, press MENU to exit.

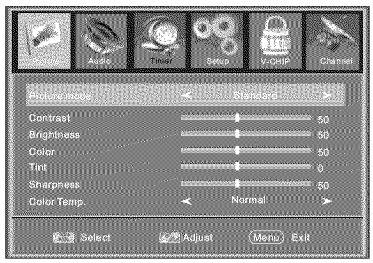

Note:
If you want to adjust contrast, brightness, color, and sharpness , the picture mode must return to "personal" status.

2.AUDIO menu

The second item of the MENU is AUDIO MENU.
You can adjust sound here.
Press▼▲ to select, press ◀ ▶ to adjust, press MENU to exit.

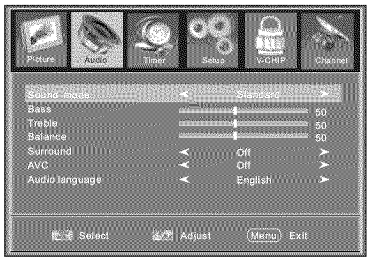

Note:
The item of Audio language is available in ATSC program.

3.TIMER MENU

The third item of the MENU is TIMER MENU.
You can adjust time here.
Press▼▲to select, press ◀ ▶ to adjust, press MENU to exit.

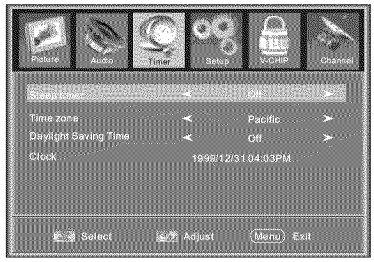

1).SLEEP TIMER: adjust this item , you can set the sleep timer .
Note:
The item of Time zone, the item of Daylight Saving Time and the item of clock are available in ATSC program

4. SETUP MENU

The forth item of the MENU is SETUP MENU.
You can setup system here.
Press▼▲to select, press ◀ ▶ to adjust, press MENU to exit.

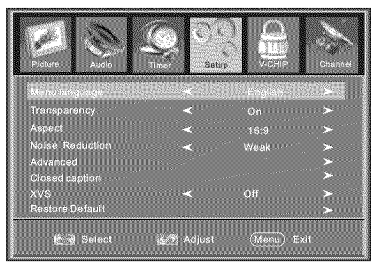

Note:
Restore Default: Reset all the settings to default value.

1). Advanced: In PC Mode is available.

Press ▼▲ button to select Advanced ,Press ▶ button, the screen will display as follow:

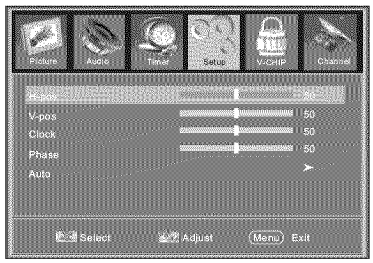

(1).H-Pos:Adjust the horizontal position of the screen.
(2).V-Pos:Adjust the vertical position of the screen.
(3).Clock: Fine tune the screen width.
(4).Phase: Fine tune the phase of the screen. Usually don`t adjust this item.
(5).Auto: Auto adjust to fit the screen.

2). Closed Caption: switch close caption mode.

Press ▼▲ button to select Closed Caption ,Press ▶ button, the screen will display as follow:

(1):Advanced selection: only ATSC program is available.
(2):Option:Used to edit CC font.

Press ▶ button, the screen will display as follow:

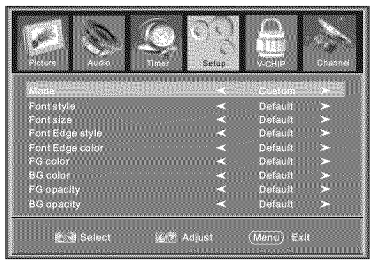

NOTE: Only ATSC program is available.

5. V-CHIP MENU

The fifth item of the MENU is V-CHIP MENU.
You can setup Parental Control here.
Press ▼▲ to select, press ◀ ▶ to adjust, press MENU to exit.
Parent control: input the password, it will go into Parental Control menu. Factory default password is 6666.

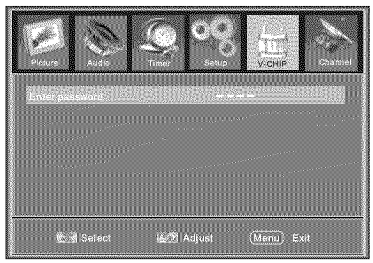

5.1 .Input the correct password ,the screen will display as follow:

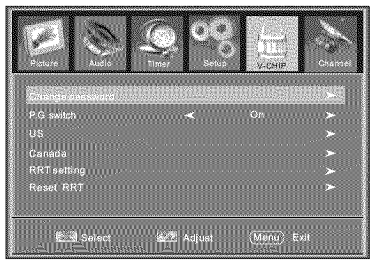

1). Change Password: Press ▶ button, the screen will display as follow:

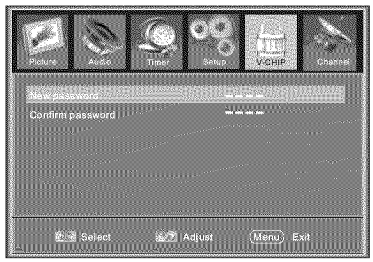

1).New password: Input the new password

2).Confirm password: Input the new password again

5.2 V-CHIP switch:
When the Parental Control switch is ON, the below options can be adjusted.

5.3 US: Press ▶ button, the screen will display as follow:

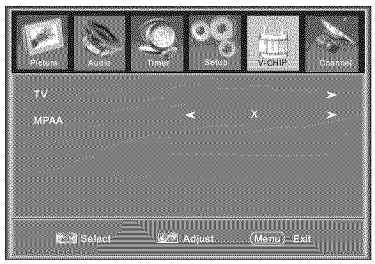

1):TV: Press ▶ button, the screen will display as follow:

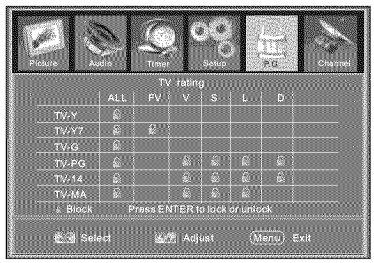

Rating Content		Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Suggested age	TV-Y (All children)					
	TV-Y7(Direct to order children)	X				
	TV-G(General audience)					
	TV-PG(Parental Guidance suggested)		X	X	X	X
	TV-14(Parents strongly cautioned)		X	X	X	X
	TV-MA(Mature audience only)		X	X	X	

And use ENTER key to switch lock/ unlock Parental Control feature.

2).MPAA:switch the movie-rating control level; N/A, G,PG, PG-13,R,NC-17,X.

Rating		Description
Age	G	General audiences, All Ages admitted
	PG	Parental Guidance suggested. Some material may not be Suitable for children.
	PG-13	Parents strongly cautioned. Some material .may be Inappropriate for children under 13.
	R	Restrict. Under 17 requires accompanying parent or adult guardian(age varies in some jurisdictions)
	NC-17	No one 17 and under admitted.
	X	X is an order rating that is unified with NC-17 but may be encoded in the data of order movies.

5.4 Canada: Press ▶ button, the screen will be displayed as follow:

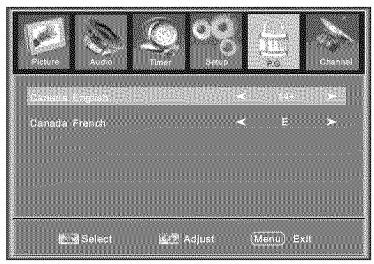

1): Canada English: switch the english rating control level:E,C,C8+,G,PG,14+,18+.

Rating		Description
Age	E	Exempt: Includes news, sports, documents and other information programming: talk shows, music videos, and variety programming.
	C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of securityand well-being.
	C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen .
	G	General: Considered acceptable for all age groups, Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
	PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
	14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline But it must be integral to the devel opment of plot or character. Language usage could be profane and nudity , present within the context of theme.
	18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of secretary and nudity.

2).Canada French: switch the French-rating control level: E, G,8ANS+,13 ANS+,16ANS+,18ANS+.

Rating		Description
Age	E	Exempt programming
	G	General :All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner .
	8ans+	General but inadvisable for young children :May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with paren.
	13ans+	Over 13 years: Could contain scenes of frequent violent scenes and in tense violence.
	16ans+	Over 16 years: Could contain frequent violent scenes and violence.
	18ans+	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

5.5 RRT setting: in ATSC digital TV mode, it could be adjusted

5.6 Reset RRT: Press ▶ button, the screen will be displayed as follow:

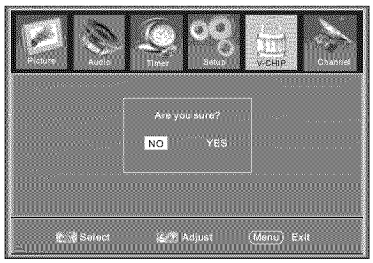

6. Channel MENU

The sixth item of the MENU is Channel MENU. You can adjust digital and analoge TV Channel . Press ▼▲ to move, press ◀▶ to adjust here.

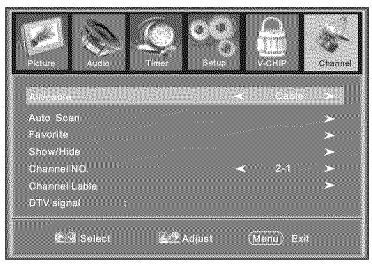

1). Air/Cable: select Air TV signal and cable TV signal.
2). Auto Scan: If it's the first time you use the TV, you should scan all the TV channels first, press the ▶ button to confirm, you will see below menu :

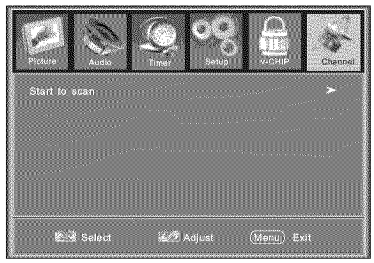

A: Start to scan: press the ▶ button to confirm, you will see below menu which indicates auto search is in process.

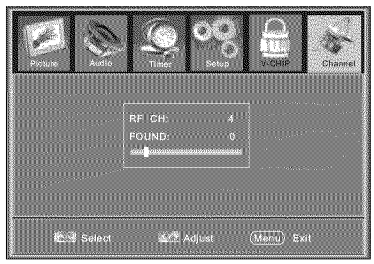

3). Favorite: Press ◀▶ button to choose/delete the favorite channel .
4). Show/Hide: Press ◀▶ button to display or hide currently channel.
5). Channel NO. :Display the currently channel number.
6). Channel lable: Press ▲▼button to edit currently channel name.
7). DTV signal: Display DTV signal intension. It can't be selected and adjusted.

DVD SIDE PANEL

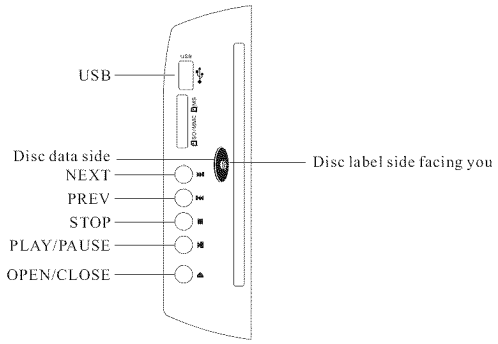

USB
In DVD mode, press DVD/USB button on the Remote control, insert a USB or a MP3 player with USB interface to play the MP3, JPEG and MPEG4 files.

3 in 1 Card Reader
In DVD mode, press DVD/USB button on the Remote control, you can insert three kinds of card (SD, MMC, MS) to play the mp3 music or MPEG4 movie and JPEG files. All the function is the same as playing a disc.

Please make sure to stop playing disc before inserting a USB/CARD. You can play USB/CARD by pressing keys on the remote control with the following sequence.

1. DVD/USB key
2. UP/DOWN key to select DISC/USB/CARD
3. ENTER key to confirm

Caution:
When using USB/3 in 1 Card Reader function, please do not insert in the wrong direction, or else it will damage the unit.

CLASS 1 LASER PRODUCT

Caution

ThisDVDPlayerhasaClass1laserwhichmaybeharmful toyoureyes.Donotattempttodisassemblethecabinetor makeAndadjustments.Referallservicingtoaqualifiedp refessional.

MENU OPERATION
Press the SETUP button on the remote control, the SETUP MENU will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, and press RIGHT direction button to select the lower item. Then press the ENTER button to confirm. Press LEFT direction button return to the menu of upper level. To exit the setup, press the SETUP button again. In the SETUP MENU, you may choose any of the following options as you like.

LANGUAGE SETUP
Select Language in the setup menu, and display the Language submenu:

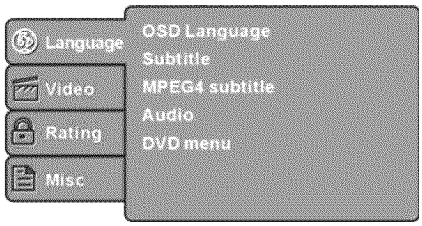

OSD Language
Use this item to select the language of the setup menu and screen display.
Subtitle
This option provides the preset subtitle language.
MPEG4 Subtitle(optional)
Select different MPEG4 subtitle encoding option.
Note: *Not all players support this item.*
Audio
Select the built-in disc dubbing language options.
DVD Menu
This option provides the film's menu language options.

VIDEO SETUP
Select **Video** in the setup menu, and display the **Video** submenu:

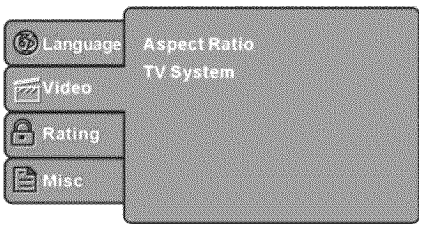

SYSTEM SETUP
Aspect Ratio
Select the aspect ratio.
Notes:
The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

TV System
Select the different TV system.
Note: The DVD player setting should be matched to your TV set.For more information of output format, refer to the instructions or your TV set.

RATING SETUP
Select **Rating** in the setup menu, and display the Rating submenu:

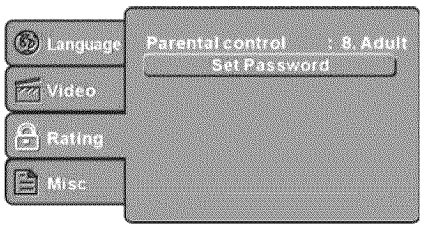

Parental Control
Set the parental control feature of the player
Note: *Password is needed before setting Parental Control.*

Set Password
Input four digits (password), then press ENTER to confirm.
Note: *If you forget your password, please use the universal password 6666 to unlock.*

MISC SETUP
Select **MISC** in the setup menu, and display the submenu:

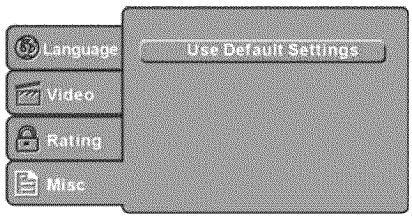

Use Default Settings
Reset setup data to factory default value.

MP3/WMA/JPEG/MPEG4 PLAYBACK

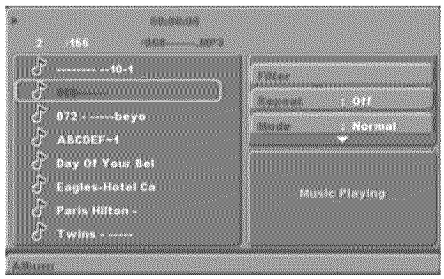

The MP3/WMA/MPEG4 disc has such a directory structure as shown picture above.
Press **Direction key** to choose the root directory and then press ENTER button to enter into the sub directory. Press **Direction key** to choose the desired track and then press **ENTER** or **PLAY** to enjoy the music or movie. If you want to return to the upper menu, press **Direction key** to choose the icon and press **ENTER** button.

Filter: Allows selecting the categories of files displayed in the browser list.
Repeat: To switch different repeat playing mode
Mode: Select different playing mode as follows:
Normal: Shuffle mode is cancelled.
Shuffle: Shuffle mode enabled. When playback reaches the end of the currentchapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different **Mode** Option.
Edit Mode:
Program CD or MP3 Disc :
1.CD/MP3 Playback manual will appear on screen once you insert the dics in the slot . Disc will start playback automatically .
2.IN STOP MODE : press right button , then press UP/Down button to highlight the Edit Mode and press ENTER to confirm .
3.Press left button to move cursor back to TRACK and select desired tracks which you prefer to program , then press ENTER to confirm .
4. Press right button to move cursor to " ADD PROGRAM" , then press ENTER button to confirm .
5. Highlight " PROGRAM VIEW" and press "ENTER" , the programmed tracks will appear and press PLAY button on the remote control to start Program Play .
6. If you wish to clear those you have programmed , press STOP button twice , then move Left cursor to highlight the programmed tracks , use UP/DOWN button to select the tracks you wish to clear , then press ENTER button,press RIGHT button to highlight the " CLEAR PROGRAM " and press ENTER button to clear all . (If you wish to return to Disc Menu , use Right arrow to highlight " BROWSER VIEW" and press " ENTER" button .

PICTURE CD PLAYBACK

The PICTURE CD disc has such a directory structure structure as shown in the following picture.

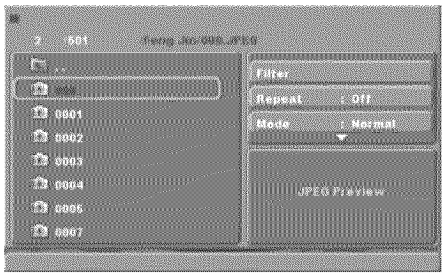

Press **Direction key** to choose the root directory and then press ENTER button to enter into the sub directory. Press **Direction key** to choose the desired picture and then press **ENTER** or **PLAY** to enjoy the picture. If you want to return to the upper menu, press **Direction key** to choose the icon and press **ENTER** button.
Image rotation
In picture play state, press **Direction key** to rotate the picture.

CARD READER ,USB

3 In 1 Card Reader
If the player has a 3 in1 card jack and it's NOT in "disc playing" status, you can insert three kinds of card (MMC, SD , MS) to play the mp3 music or MPEG4 movie and JPEG files. All the function is the same to playing a disc.

USB
If the player has a USB slot and it's NOT in "disc playing" status, you can insert a USB device or a Mp3 Player with USB Interface to play the MP3 music or and JPEG files. All the function is the same to play a disc.

When the disc is playing, please stop playing first and insert a USB/CARD, enjoying USB/CARD by press **DVD/USB** key on the remote controller ,and then press ▼/▲ key to select DISC/USB/CARD,and press ENTER to confirm.
Not all USB/CARD device can be supported by this system.

Note: When using USB/3 in 1 Card Reader function, please do not insert in the wrong direction, or else it will damage the unit.

Function Buttons

OPEN/CLOSE
To open the disc tray, press OPEN/CLOSE; To close the disc tray, press OPEN/CLOSE again.

SUBTITLE
Press the button to choose different captions*(Requires support from disc)*

GOTO
For DVD discs, press the button to choose the desired title and chapter andsearch the desired title time and chapter time.For Super VCD,VCD,CD discs, press this button to search the desired disc time and track time and choose the desired track.
Note: During VCD playback, the PBC mode must be set to OFF.

0-9 keys
These keys are used to input the time, as well as title, chapter and track numbers.When a numeric item is displayed on the screen, press the 0-9 keys to select the desired entry, and press ENTER/OK to confirm.
When a VCD is playing(with PBC off), press the 0-9 keys to select a track directly.

MENU
During DVD playback, press MENU to display the disc menu of the current title.
During VCD/SVCD playback, press MENU to control PBC ON/OFF.

SETUP
Press the button to enter the system setting menu. Press the button again to exit the menu.

RETURN
When DVD/SVCD/VCD displaying, press RETURN button to the menu(PBC ON only).

DISPLAY
Press the button to show the information of the current playing disc.

ENTER
Press the button to confirm your choice on screen.

REV:
During DVD, CD Mp3 or VCD playback, press REV to scan in reverse. The player will review the disc at different times speed. Press PLAY/PAUSE to resume normal playback.

FWD
During DVD, CD,MP3, or VCD playback, press FWD to scan forward.The player will cue the disc at different speed. Press PLAY/PAUSE to resume normal playback.

PREV
During DVD, CD,MP3, or VCD playback, press **PREV** to play the previous chapter, title or track.

NEXT
During DVD,CD,MP3, or VCD playback, press **NEXT** toplay the next chapter, title or track.

STOP
Press the button once and the player will be in memory stop state. Continuously press this button twice and the player will be in complete stop state.

Play/Pause
In pause state or stop state, press the button, the player will be in playing state.In play state, press the button the player will be in pause state.

DVD Trouble shooting

If you have any questions, please consult the troubleshooting guide below:

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio is not set to mute.
- Ensure you have set the player s AUDIO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the player s AUDIO settings correctly
- Ensure the disc is not scratched or stained.

"BAD DISC" DISPLAYED

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- Make sure the Main unit s POWER button is on
- Ensure the remote batteries are working.
- Point the remote control directly at the player s IRsensor.
- Remove any obstacles between the remote and theIR sensor.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

"NO DISC" DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Trouble shooting

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
Snow	 Noise	antenna position, direction or connection
Ghost	Normal audio	antenna position, direction or connection
Interference	 Noise	electronic equipment,car/ motorcycle,fluorescent light
 Normal Picture	 Mute	Volume(check if mute is activated or if the audio system connections are not correct)
No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No colour	Normal audio	Colour control
 Picture breaking up	Normal audio or weak	retune channel
 No colour	 Noise	TVsystem

The LCDTV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue, black or white. Please note this does not affect the performance of the product.

INSTRUCTION FOR WALL MOUNT

The wall mount kit (not included) with your purchase allows you to mount your VIORE TV on the wall. For detailed information on installing the wall mount, refer to the instructions provided by the wall mount manufacturer. It is strongly recommended to contact a technician for professional assistance for wall mount installation. VIORE is not responsible for any damage to the product or injury to yourself or others resulting from the wall-mounting.

VESA Dimensions for Wall Mout

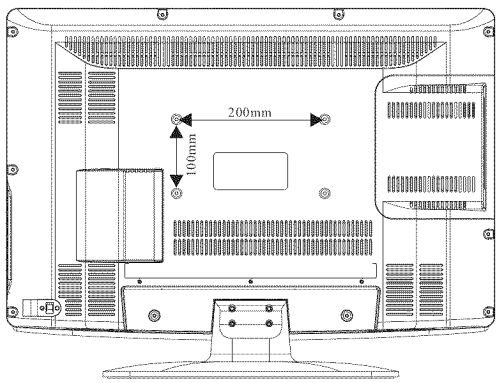

·This VIORE TV is complaint with the VESA Standard mounting hole pattern200mm x 100mm.
·4 pcs of type M4 screws are required for installing the wall mount bracket to your VIORE TV. The depth of the threaded mounting holes on your VIORE TV is 5.5 mm. Therefore, please use M4 screws of which length is 4 mm ~ 5 mm plus the thickness of the wall mount bracket.
Do not fasten the screws too tight for this may damage the TV or cause the TV to fall, resulting in personal injury. VIORE is not liable for these kinds of incidents.
Do not mount your VIORE TV at more than a 15 degree tilt.
Always use two people to mount the TV to a wall.
Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

Viore,Inc.
7801 Hayvenhurst Avenue, Van Nuys,CA 91406

Printed in China